



**Installation Instructions
Version 5.0**

D=CAM

1.1 System Requirements

- Hardware Requirements** Pentium IV, higher or compatible processor.
- CPU 1.5 GHz
 - 1 GB RAM
 - 750 MB free harddisk space
 - Memory Overload File min. 256 MB
 - OPEN GL Graphics Card NVIDIA min. 256 MB. **ATI Graphic Cards are not supported.**
 - 3-Button Mouse
 - 1-2 USB-Ports for Hardlocks
 - DVD - Drive
- Software Requirements**
- Windows XP Professional from SP2 (32bit)
 - Windows Vista from SP1 (32bit)
 - **64bit Windows is not supported**
 - AutoCAD / MDT versions 2007 to 2010
 - Acrobat Reader 7.08 or later

1.2 Content of Delivery

- Content** The Software Package contains:
- Installation-CD-ROM or DVD
 - One or two Hardlocks
 - User Manual DCAMCUT (optional)
 - License file (*.lic) or License code CAM
- Modules** DCAMCUT will be delivered, depending on the order (refer to the delivery notes), with one of the following modules:
- DCAMCUT BASIC** Is the DCAM-Module for
2-Axis Machining + Standard Taper + NC-Browser + Template Module
- DCAMCUT BASIC+** Is the DCAM-Module for
2-Axis Machining + Standard Taper + NC-Browser + Template Module + Ruled Surface Machining via 2 levels

DCAMCUT DEMO-Version - Without hardlock DCAMCUT will run in demo mode only. In demo mode all basic functions are available. NC-Output is disabled.

A demo installation can be registered to run in licensed mode with a valid license file & hardlock.

Attention! Coordinate output in NC-Files will be rounded to 1 sub-digit. All radii are pre-defined by 0,3 mm.

1.3 Pre-Installation Steps

Dongle Keep the dongle for DCAMCUT in reach.

 
Do not place the dongles to USB-Ports before the installation has been completely finished!

Depending on your order 1 or 2 local / network dongles will be delivered with the software.

Pre-Settings Close all open WINDOWS-Programs before running the installation.

2.1 Installation DCAMCUT for AutoCAD / Mechanical Desktop

Setup

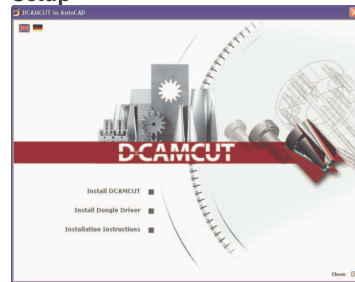

Place the Installation-CD/DVD to the DVD-Drive.

 
The Setup will run automatically. Select the setup language afterwards.

Installation Instructions




Read the Installation Instructions carefully before installing the software. Print a duplicate and keep it in reach of your hands in case you like to refer to the document again during the installation process.

Run Installation

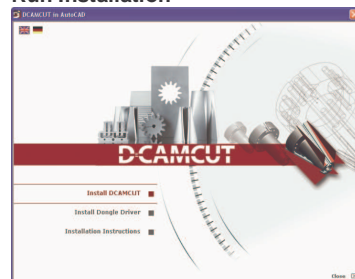


Select the option **Install DCAMCUT** to install DCAMCUT to the system.

 Welcome Page

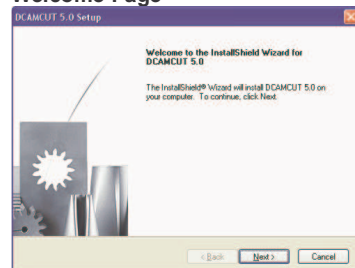


The DCAMCUT Installation Wizard will appear on the screen. Select the **Install** button to continue installation.

 License Agreement

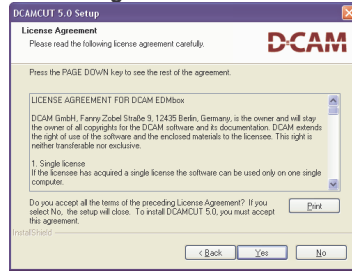


Read the License Agreement carefully and accept the conditions in case you agree to them. Choose the **Next** button from the dialog to continue.

 Installation Details

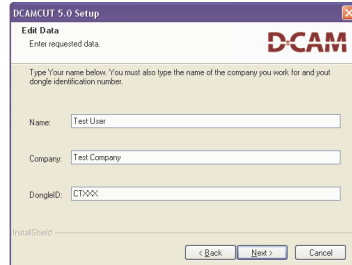


Fill in your name, the company name as well as your dongle ID (see shipping form or sticker on the delivered hardlock for details) to the Customer Information dialog and go on with **Next**.

 Destination Directory

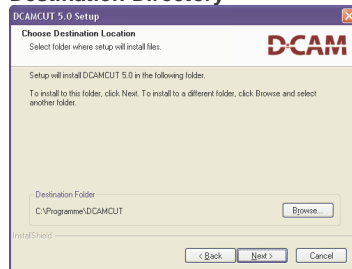


Choose the destination folder for the installation of DCAMCUT (default directory is C:\Programme\DCAMCUT) and select **Next**.

 Installation Process

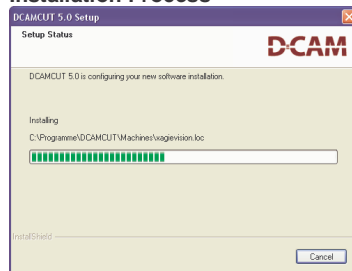

The CAM-Components will now be installed and registered on the system. This may take several minutes!

 
DCAMCUT License File



The setup will ask you to define a license file for DCAMCUT. In case you have already received the requested file click **Browse**.

If you do not have a valid license file go on with **No**.

 
Choose License File

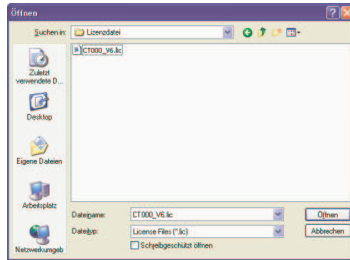

Select the license file (e.g. CT000_V5.lic) and select **Open** from the dialog.


If you do not have received a license file you can also unlock the system after the installation by entering the codes (see shipping form) manually. Please refer to point **2.3** to get more information about this.

 Finish Installation

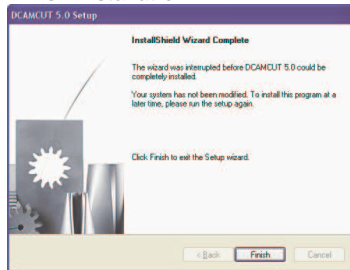

Select **Finish** from the dialog to exit the DCAMCUT Installation Wizard.

 Exit Setup

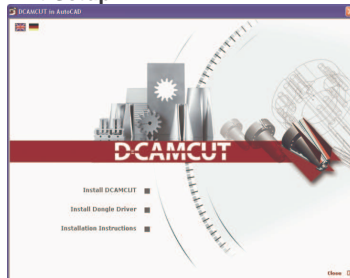

Select **Close** to exit the DCAMCUT Setup.

2.2 Install Hardlock / Dongle Apply Hardlock / Dongle

After the installation has been completed place the delivered Hardlocks / Dongles to free USB-Ports on your computer.

If the system will prompt that new hardware has been found and asks you for a related driver, choose the option **Detect Driver Automatically**. If the related driver has been found and installed successfully a message will appear that the new hardware is now ready for use.

2.3 OPTIONAL – Manual Licensing DCAMCUT

 
Regularly the DCAMCUT setup will prompt you during the installation process to specify the license file (*.lic).

If you do not have a valid license file during the setup you can also unlock the system after the installation by entering the codes (see shipping form) manually. Proceed as follows to register the Wire-EDM functionality manually.

Manual Authorization

Select **Wire Cutting -> Service -> Authorize Modules** from the DCAMCUT main menu to run the authorization process.

Type in Codes

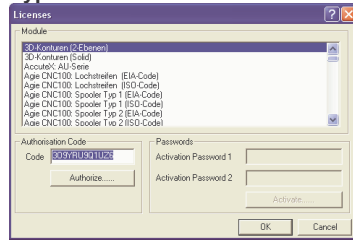

Select the Module to unlock (see shipping form) and type in the related Code. The code can be entered in small or big characters. Accept each code with the Authorize button.

The file dcam.lic will be automatically created in the background within the installation directory e.g. C:\DCAM\DCAMCUT\dcam.lic
Save this file to save time in case of re-authorization of the product.

2.4 Registering DCAMCUT in ACAD / MDT

Enable DCAMCUT

Run ACAD / MDT and type in the command **'dcam'** into the command line of the CAD-System. After this the system will ask you to specify the related menu file. Type in **'dcam.mnu'** into the command line of the CAD-System to enable the Wire-EDM toolbar. Dock the DCAMCUT toolbar at the place you prefer within the CAD-System.